

Check Belly Stop Button and Micro Switch Position

1. First of all, make sure the machine is powered off and surrounding is safe.



2. Press the belly stop button to see if you can hear click sound, if not, you need to loose the screws, be aware that the belly stop button may pop out when you are loosing the screws. loose the two bottom screws, then loose the two top screws.



3. Check the belly stop button, see if all four hooks in the corner and pin in the middle is intact.



4. Make sure the micro switch box is in correct position (blue square), then press the micro switch (circled in red) to see if you can hear click sound.

