



take off the pin




pull out the shaft



insert the shaft

make sure the chain is out

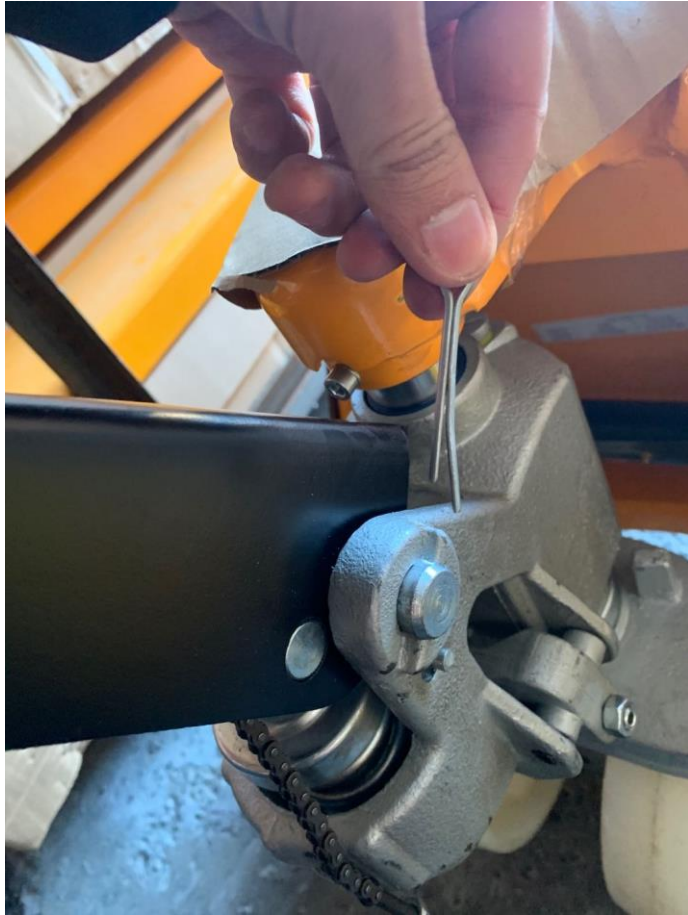


put the chain in, and it must go
cross into the hole of shaft



1.lift up this

2. insert the chain in this position

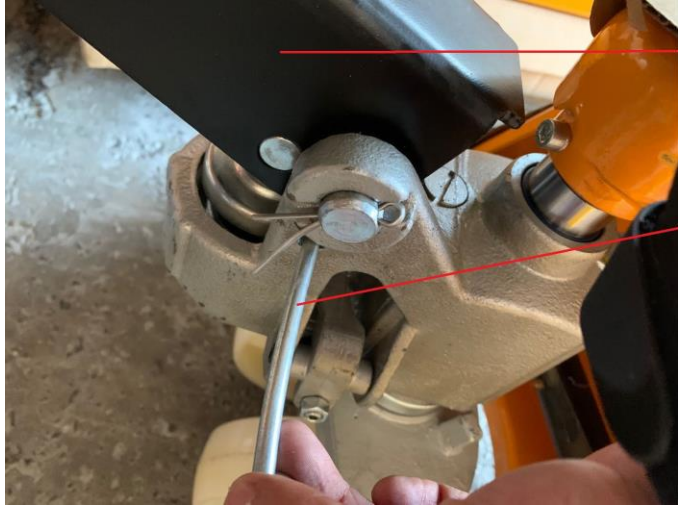

1.press down the handle

2. take off this safty pin.